



## **MODEL: EM36 CEMENT MIXER**

### OPERATING AND MAINTENANCE INSTRUCTIONS



### **3.6cuft Trade Mixer**

TO PREVENT SERIOUS INJURY  
READ AND UNDERSTAND ALL WARNINGS  
AND INSTRUCTIONS BEFORE USE.

AG Pulie Pty Ltd  
6 Wentworth St  
PO Box 309  
Granville NSW 2142

[www.agpulie.com.au](http://www.agpulie.com.au)

**Model No** — EM36

**Plant Name** — Electric EM36 Side-tip

**Manufacture** — AG Pulie

**Mandatory Personal Protective Equipment** —



Foot  
Protection



Eye  
Protection



Protective  
Clothing



## RISK ASSESSMENT INFORMATION

**Operator Competency** – Plant Licence Not Required

<b>Potential Hazard(s)</b>	<b>Risk Level</b>	<b>Control Measure(s)</b>
Contact with Moving Parts	Low	Do not operate unless all covers and guards are correctly mounted onto mixer. Do not place tools or body parts into mixer bowl while mixer is running.
Electrocution	Medium	Use a 10amp lead that is no longer than 30 meters. Ensure that the power lead is in good condition with no cuts or exposed wires. Do not use in wet weather conditions. Ensure that you are connecting to a reliable power supply that is in good condition. Switch ON/OFF at motor

### **IMPORTANT**

#### **Before using mixer,**

Fill bowl housing with grease until it oozes out from indicator hole (1 nipple), grease pinion 4 head sleeve (2 Nipples).

Do not apply grease to the bowl ring gear as the grease will mix with dust to create a grinding paste and wear down the gears – applying grease to the ring gear will void warranty.

#### **Key Operating Instructions**

1. Place mixer on firm, level ground, use stabilizer legs to level.
2. Connect mixer to mains power supply by using a 10amp power cable not exceeding 30meters in length. Switch motor ON
3. When the bowl is against the loading stop, load mixer with product.
4. Mixer must be running whilst loading and unloading.
5. When mixing is complete, rotate from loading stop and empty mixer as soon as possible.
6. When Working is completed, switch motor OFF and disconnect from the mains power supply.
7. Clean after every use – DO NOT pour or spray water directly into or over the motor cover

NB – if fitted with a petrol motor please read and understand all manufacturers instructions before operating the equipment.