

MASTER FINISH

Petrol HandyVibe

OPERATING AND MAINTENANCE INSTRUCTIONS



HV44/HV44E

TO PREVENT SERIOUS INJURY
READ AND UNDERSTAND ALL WARNINGS
AND INSTRUCTIONS BEFORE USE.

AG Pulie Pty Ltd
6 Wentworth St
PO Box 309
Granville NSW 2142

www.agpulie.com.au

Model No — HV44/HV44E

Plant Name — MasterFinish Petrol HandyVibes

Manufacture — AG Pulie



Mandatory Personal Protective Equipment —



Foot Protection



Hearing Protection



Protective Clothing

RISK ASSESSMENT INFORMATION

Operator Competency – Plant Licence Not Required

Potential Hazard(s)	Risk Level	Control Measure(s)
Contact with Moving Parts	Low	Do not operate unless all covers and guards are correctly mounted on to the machine.
Contact with hot parts of the engine	Low/Medium	Muffler is fitted with a heat shield. Allow motor to cool down before performing maintenance. Take note of warning labels on the motor.
Explosion or Fire	Medium	Don't refuel while the motor is running or hot. Avoid spilling fuel when refuelling. Follow motor manufacturers instructions for refuel and petrol safety
Hearing damage	Medium/Low	Ensure you are wearing hearing protection rated to the db output of the motor
Poisoning from Fumes	Medium/Low	Always operate the machine in a well-ventilated area. Avoid breathing in petrol fumes.
Injury Caused By excessive vibration	Low	Ensure you take regular breaks to make sure you're not exposed to excessive vibration

IMPORTANT

Before using HandyVibe,

Read and understand these operators' instructions

Follow the motor manufacturers instructions for operating the motor

Ensure that the work site is safe and free of hazards

Key Operating Instructions

- 1- To start the motor follow the manufactures instructions in the motors owner's manual
- 2- When using machine press the throttle to desired speed and then insert into concrete
- 3- Always hold both handles and use the shoulder strap provided.
- 4- To turn the machine off follow the manufactures instructions.
- 5- Always clean machinery after use – failure to do so can affect the performance of the machine.